


Components

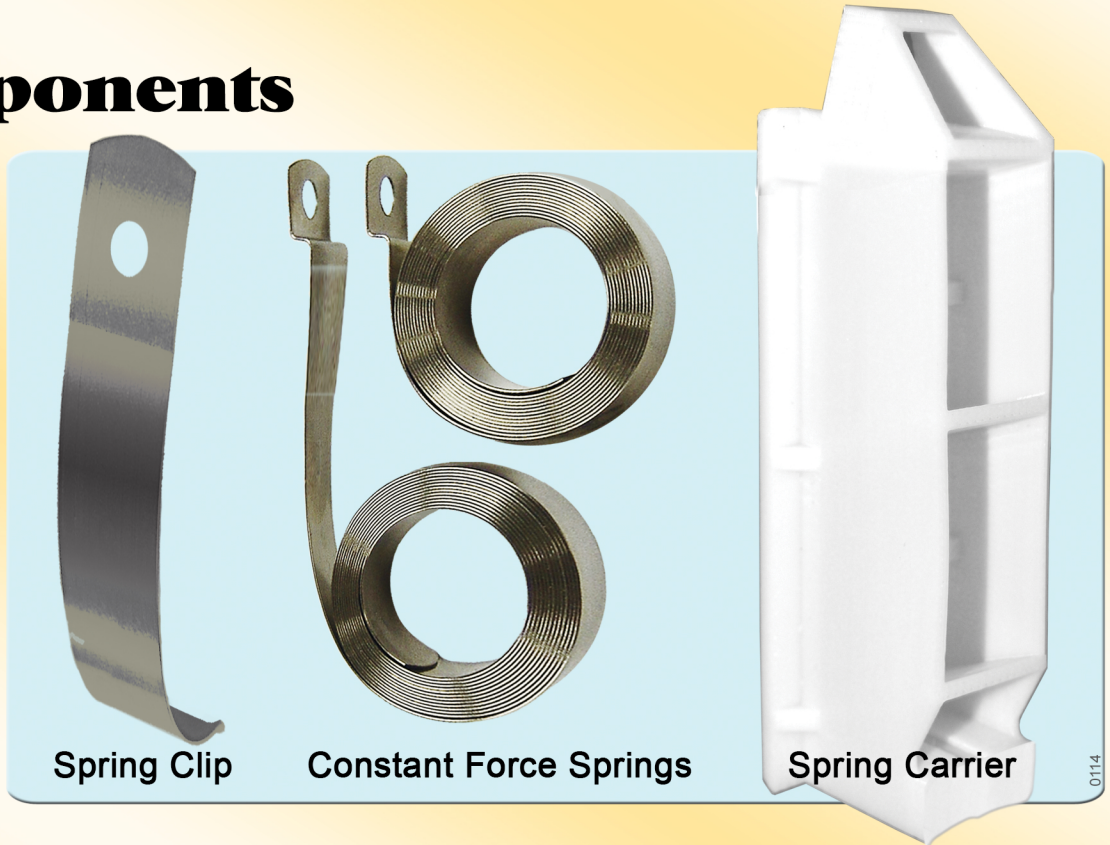

Spring Clip

Constant Force Springs




Spring Carrier

0114

Available configurations



Component Attachment Details

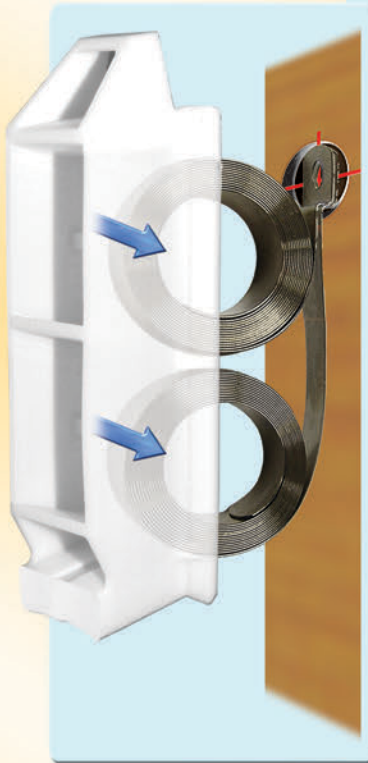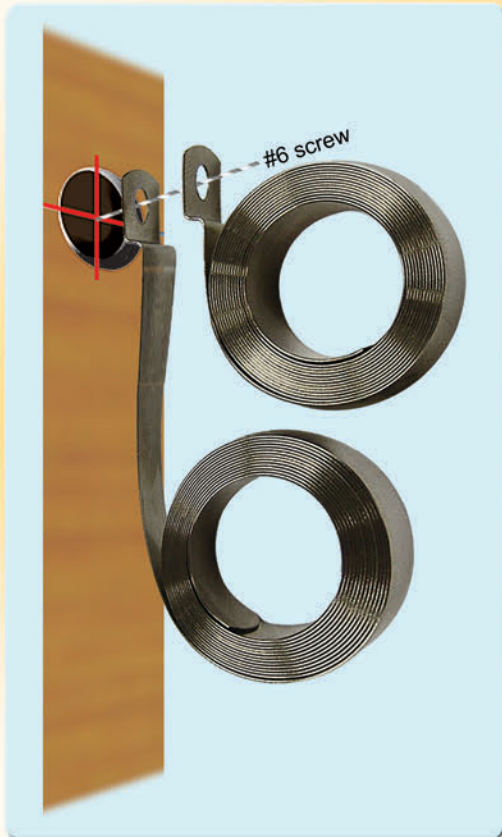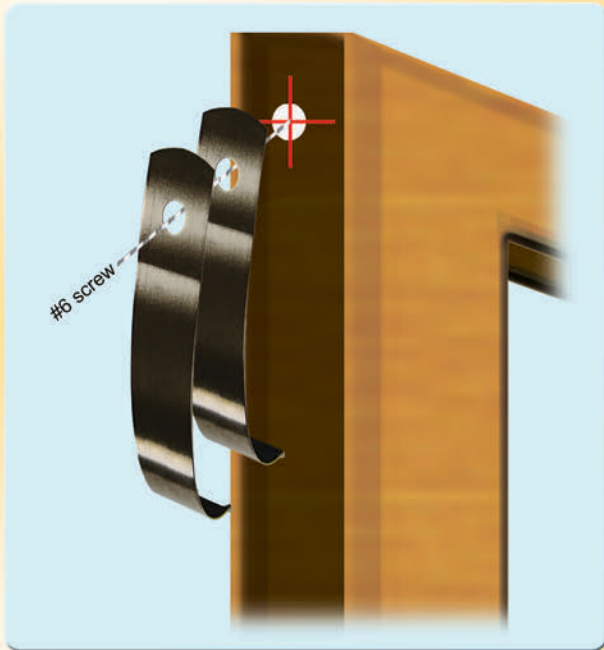

The **SIDE LOAD** for *Wood Windows*
Constant Force Balance System®




(Shown as viewed from inside)

Covered by one or more of the following patents & patents pending, found at: <http://www.springcompany.com/downloads>

JOHN EVANS' SONS Est. 1850
SPRINGS MADE BETTER

window jamb

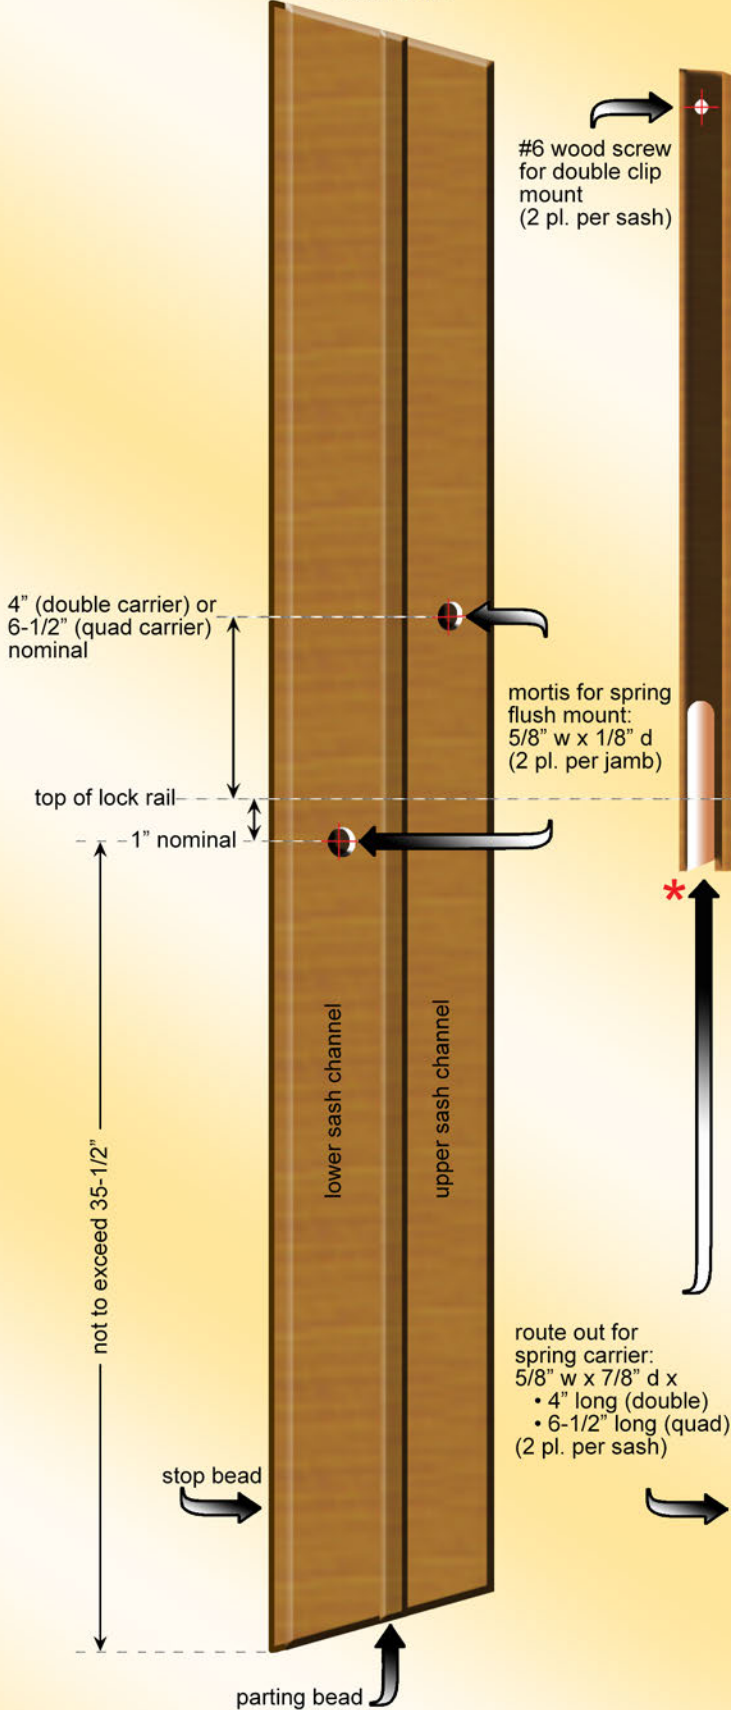

For Upper Sash:
 When installing spring carrier, always load uppermost "pocket(s)" i.e. if all pockets are not used, lowest pocket(s) should be empty.

* Do not through route decorative horn (if equipped) on upper sash.

For Lower Sash:
 Always load lowest "pocket(s)" if not using all pockets.

