


Spring slot fixturing steps

Adjust spacing screws flush with interior edge of stile, to center slots of template with balance pocket.



We recommend using Dremel Multipurpose Bit #561 and an appropriately sized "C" clamp (not provided).

Screws are to right hand side of this image, and therefore not visible.

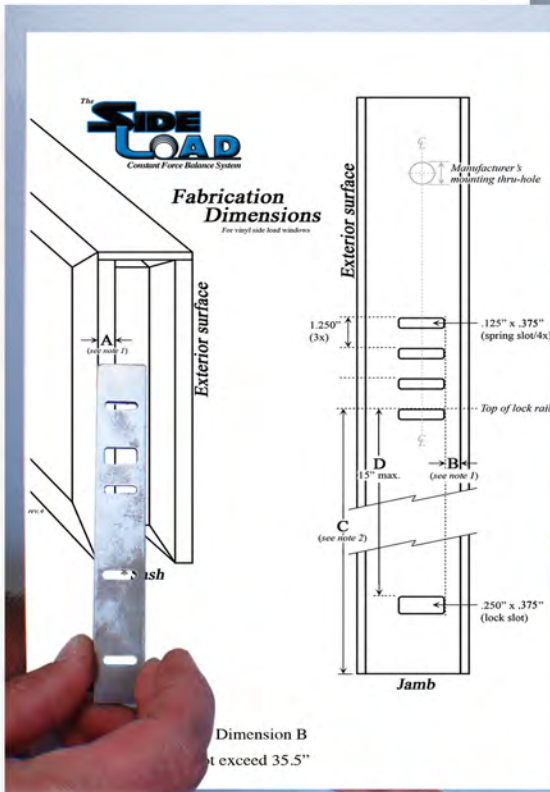

Covered by one or more of the following patents & patents pending, found at <http://www.springcompany.com/downloads>

ph: 215-368-7700
 fx: 215-368-9019
www.springcompany.com
sales@springcompany.com

JOHN EVANS' SONS Est. 1850
 SPRINGS MADE BETTER

Lock slot fixturing steps

Covered by one or more of the following patents & patents pending, found at <http://www.springcompany.com/downloads>


Fixture now placed for lock slot pocket (note orientation of set screws).

Fixture should be seated against bottom rail for this operation.



Fabrication Dimensions

For vinyl side load windows

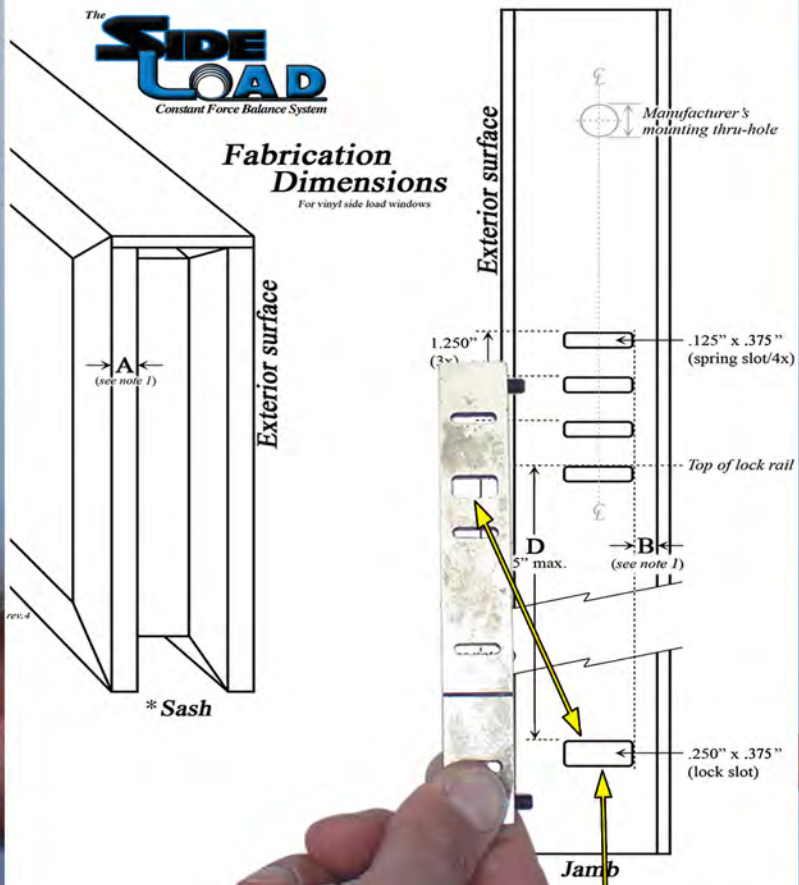

- Notes:
1. Dimension A =
 2. Dimension C =

Note: The orientation shown is mandatory in order to satisfy note 3 of the Fabrication Dimensions.



Covered by one or more of the following patents & patents pending, found at <http://www.springcompany.com/downloads>

ph: 215-368-7700
 fx: 215-368-9019
www.springcompany.com
sales@springcompany.com

JOHN EVANS' SONS Est. 1850
 SPRINGS MADE BETTER